

Everywhere End Table

Care & Assembly Instructions

Limited Warranty

100-Night Trial

Thank you for your purchase.

How to prevent tilted tables, falling frames, and diving drinks.

Contents

Caring for your Everywhere End Table	4
100-Night Trial	5
12-Year Limited Warranty	5
Parts & Hardware	6
Assembly	8

Caring for your Everywhere End Table

- ▶ Your Everywhere End Table does not require special waxing or oiling. For routine cleaning, follow the instructions below.
- ▶ Moisture and heat can damage a wood finish. To prevent moisture damage, promptly wipe up any spills or any other moisture. To prevent heat damage, avoid placing your end table too close to heat sources such as HVAC vents and radiators.
- ▶ Avoid dragging sharp or rough objects across the surface of your end table, or it will scratch.
- ▶ Wood may expand and contract with seasonal humidity changes. Maintaining consistent humidity levels will minimize movement in the wood and help to prevent warping of your end table.
- ▶ Over time, air and sunlight may change the color of natural wood. To prevent fading, avoid placing your end table in direct sunlight.
- ▶ Weight capacity: 50 lbs.



Dust frequently with a damp cloth, then immediately wipe dry.



Never use solvents, harsh chemicals or abrasives on any finishes.



Clean as necessary with a clean cloth and a solution of cool water and mild detergent.

100-Night Trial & 12-Year Limited Warranty

Thank you for purchasing a new Tuft & Needle “Everywhere End Table” We hold ourselves to high standards and are confident that you’ll be pleased with your purchase. However, if you are dissatisfied or if you discover a defect in your Everywhere End Table, simply review our 100-Night Trial Policy and 12-Year Limited Warranty and, if you believe that you are entitled to take advantage of their terms, please contact us at support@tn.com.

All products are carefully inspected prior to shipment. Please carefully inspect your Everywhere End Table at the time of delivery. PLEASE NOTE: If your Everywhere End Table or any part of it arrives damaged, please notify us within three (3) days of receipt of your delivery; we will arrange for a replacement or


return/refund as necessary, and you will not be responsible for any return fees or shipping charges. Please reach out to us by email at support@tn.com or by phone at 877-842-2586 to report items that are damaged upon delivery. We reserve the right to request images of such damage. All claim for damage ascertainable under initial inspection must be made within three (3) days after you receive delivery of the product; thereafter any physical damage to the Everywhere End Table that you do not report within three (3) days of delivery will invalidate the remainder of your 100-Night Trial.

For more information about your limited warranty, visit: tuftandneedle.com/legal/warranty.

100-Night Trial Policy

PLEASE NOTE: Any physical damage to the Everywhere End Table that you do not report to Tuft & Needle within three (3) days of delivery of your Everywhere End Table will void the remainder of the 100-Night Trial. If within the first 100 nights of using your new Tuft & Needle Everywhere End Table you’re not completely satisfied—for any reason—you may return it, if it remains in like-new condition and is undamaged, for a full refund. Damaged product will not be accepted for return. If you return a product under our 100-Night Trial Policy that we originally shipped to an address in Alaska or Hawaii, we will be unable to refund the shipping fees that you paid for the original delivery. Please retain your Everywhere End Table packaging materials to use in the event you wish to take advantage of the 100-Night Trial.

Parts

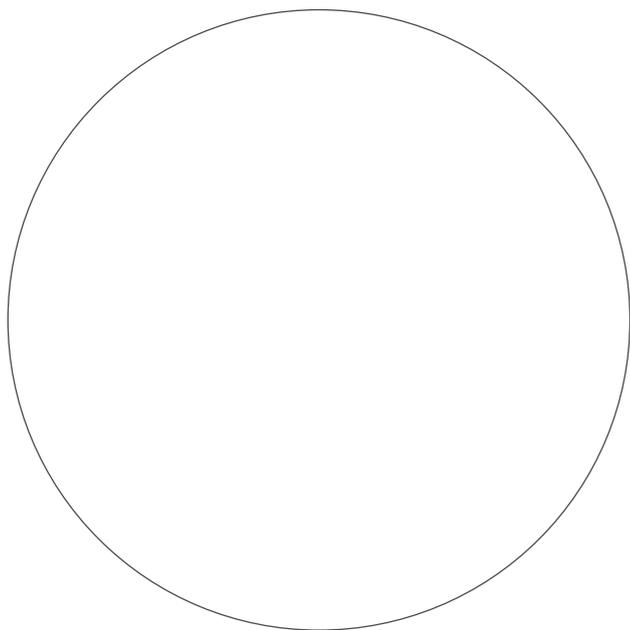

A Table top



B Leg x 4

If any parts/hardware appear to be missing, or further assembly direction is needed, reach us at (877) 842-2586 or help@tn.com

Hardware



C Assembly tool



D Threaded bolt × 8



E Flat washer × 8




F Spring washer × 8

If any parts/hardware appear to be missing, or further assembly direction is needed, reach us at (877) 842-2586 or help@tn.com


Assembly

1

Unpack all components onto a soft surface placing the table top upside down.

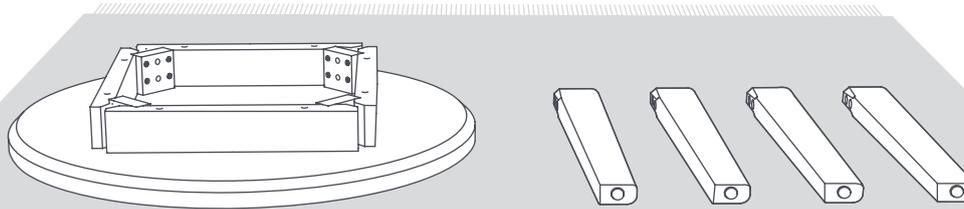


All paper and cardboard packaging is recyclable.
Help keep it out of landfills by recycling.

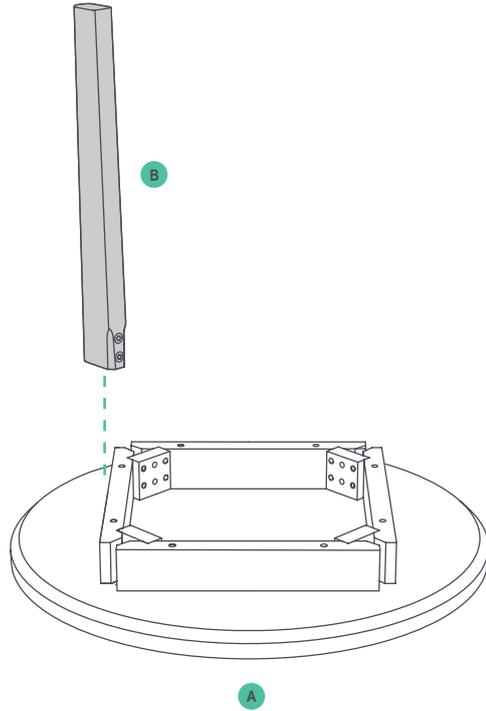


2

Place one leg **B** in a corner slot of the table top **A** aligning the holes.

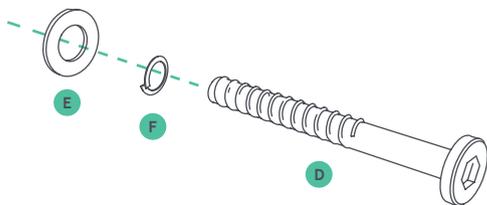


3


Place one spring washer **F** and then one flat washer **E** on each threaded bolt **D**. Insert into aligned holes and gently tighten each bolt with your fingers. Repeat for the remaining three legs.

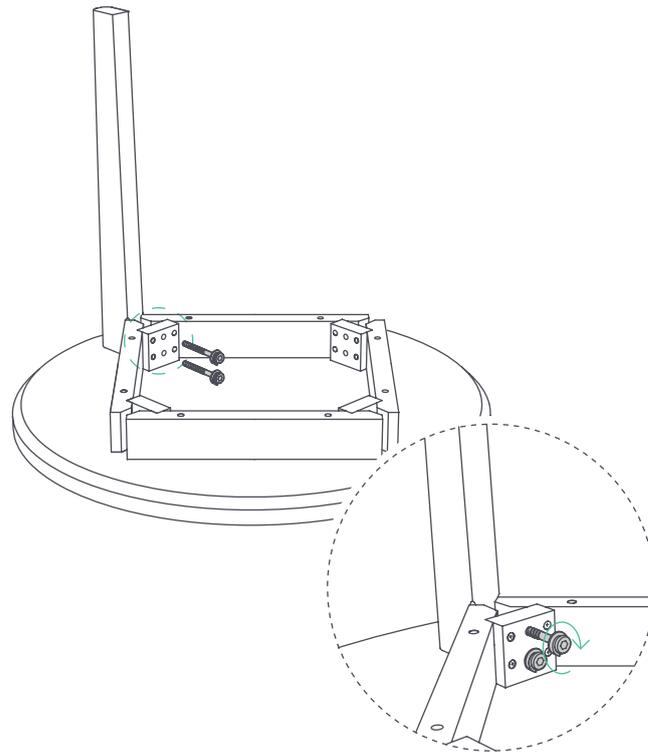

4

Using the assembly tool **C**, tighten the two bolts on each leg.

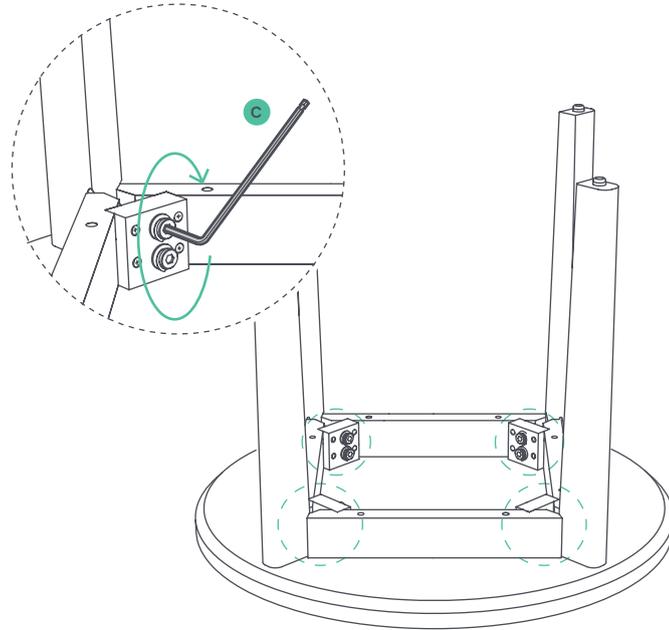

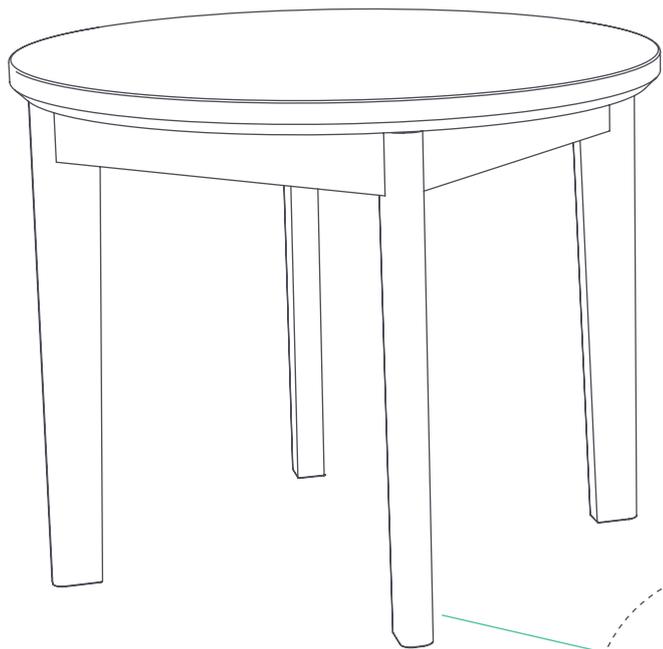

5

Flip your Everywhere End Table over to the upright position. Twist leveling feet individually to adjust the height and eliminate any tipping.

