

Nook Nightstand

Care & Assembly Instructions

Limited Warranty

100-Night Trial

Thank you for your purchase.

The handbook for your Nook.

Contents

Caring for your Nook Nightstand	4
100-Night Trial	5
12-Year Limited Warranty	5
Parts & Hardware	6
Assembly	8

Caring for your Nook Nightstand

- ▶ Your Nook Nightstand doesn't require special waxing or oiling. For routine cleaning, follow the instructions below.
- ▶ Moisture and heat can damage a wood finish. To prevent moisture damage, promptly wipe up any spills or any other moisture. To prevent heat damage, avoid placing your nightstand too close to heat sources such as HVAC vents and radiators.
- ▶ Wood may expand and contract with seasonal humidity changes. Maintaining consistent humidity levels will minimize movement in the wood and help to prevent warping of your nightstand.
- ▶ Avoid dragging sharp or rough objects across the surface of your nightstand, or it will scratch.
- ▶ Over time, air and sunlight may change the color of natural wood. To prevent fading, avoid placing your nightstand in direct sunlight.
- ▶ Top load weight capacity: 50 lbs.
Drawer weight capacity: 5 lbs.
- ▶ To prevent tipping, we have included a Tip Kit set to secure your Nook Nightstand to your wall. Instructions on page 16.



Dust frequently with a damp cloth, then immediately wipe dry.



Never use solvents, harsh chemicals, or abrasives on any finishes.



Clean as necessary with a clean cloth and a solution of cool water and mild detergent.

100-Night Trial & 12-Year Limited Warranty

Thank you for purchasing a new Tuft & Needle “Nook Nightstand.” We hold ourselves to high standards and are confident that you’ll be pleased with your purchase. However, if you are dissatisfied or if you discover a defect in your Nook Nightstand, simply review our 100-Night Trial Policy and 12-Year Limited Warranty and, if you believe that you are entitled to take advantage of their terms, please contact us at support@tn.com.

All products are carefully inspected prior to shipment. Please carefully inspect your Nook Nightstand at the time of delivery. PLEASE NOTE: If your Nook Nightstand or any part of it arrives damaged, please notify us within three (3) days of receipt of your delivery; we will arrange for a replacement or return/refund as necessary, and you will


not be responsible for any return fees or shipping charges. Please reach out to us by email at support@tn.com or by phone at (877) 842-2586 to report items that are damaged upon delivery. We reserve the right to request images of such damage. All claims for damage ascertainable under initial inspection must be made within three (3) days after you receive delivery of the product; thereafter any physical damage to the Nook Nightstand that you do not report within three (3) days of delivery will invalidate the remainder of your 100-Night Trial.

For more information about your limited warranty, visit: tuftandneedle.com/legal/warranty.

100-Night Trial Policy

PLEASE NOTE: Any physical damage to the Nook Nightstand that you do not report to Tuft & Needle within three (3) days of delivery of your Nook Nightstand will void the remainder of the 100-Night Trial. If within the first 100 nights of using your new Tuft & Needle Nook Nightstand you’re not completely satisfied—for any reason—you may return it, if it remains in like-new condition and is undamaged, for a full refund. Damaged product will not be accepted for return. If you return a product under our 100-Night Trial Policy that we originally shipped to an address in Alaska or Hawaii, we will be unable to refund the shipping fees that you paid for the original delivery. Please retain your Nook Nightstand packaging materials to use in the event you wish to take advantage of the 100-Night Trial.

Parts

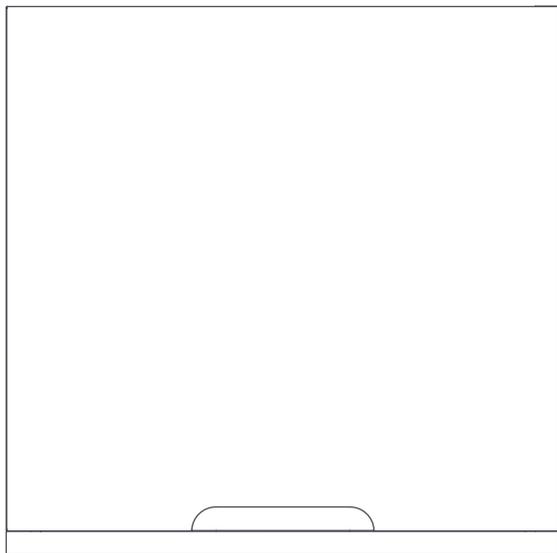

A Drawer top



B Leg × 4

If any parts/hardware appear to be missing, or further assembly direction is needed, reach out to us at (877) 842-2586 or help@tn.com

Hardware



C Assembly tool



D Threaded bolt × 8



E Flat washer × 8



F Spring washer × 8

Tip Kit See page 16.



Warning

To reduce risk of tip-over:


- ▶ Install included Tip Kit. See page 16.
- ▶ Never allow children to stand, climb, or hang on this product.
- ▶ Never put heavy objects on this product.

If any parts/hardware appear to be missing, or further assembly direction is needed, reach out to us at (877) 842-2586 or help@tn.com

Assembly

1


Unpack all components onto a soft surface, placing the drawer top upside down.

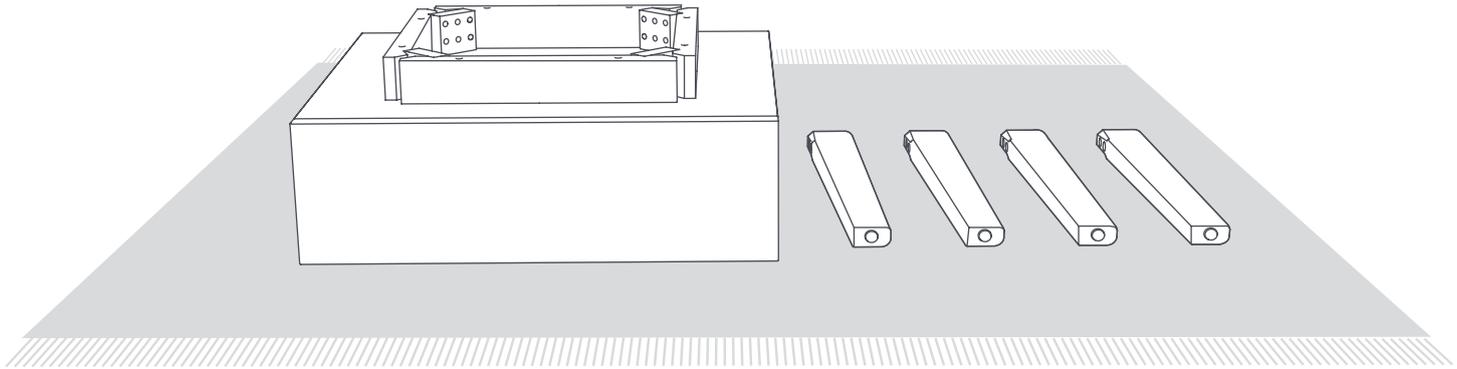

Keep foam band around drawer while unpacking to prevent drawer from opening.




All paper and cardboard packaging is recyclable. Help keep it out of landfills by recycling.

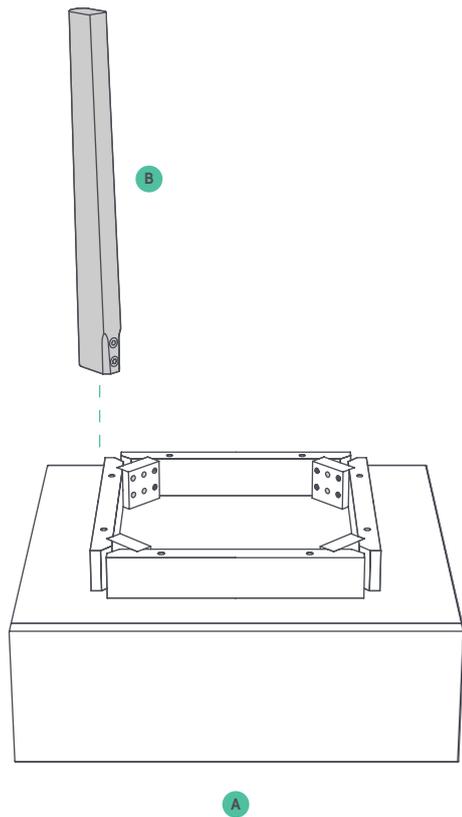


2

Place one leg **B** in a corner slot of the drawer top **A**, aligning the holes.

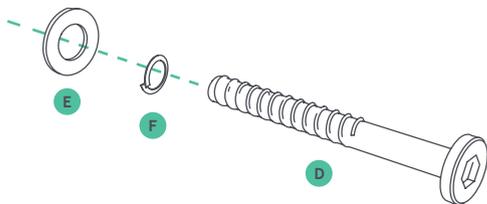


3



Place one spring washer **F** and then one flat washer **E** on each threaded bolt **D**. Insert into aligned holes and gently tighten each bolt with your fingers. Repeat for the remaining three legs.

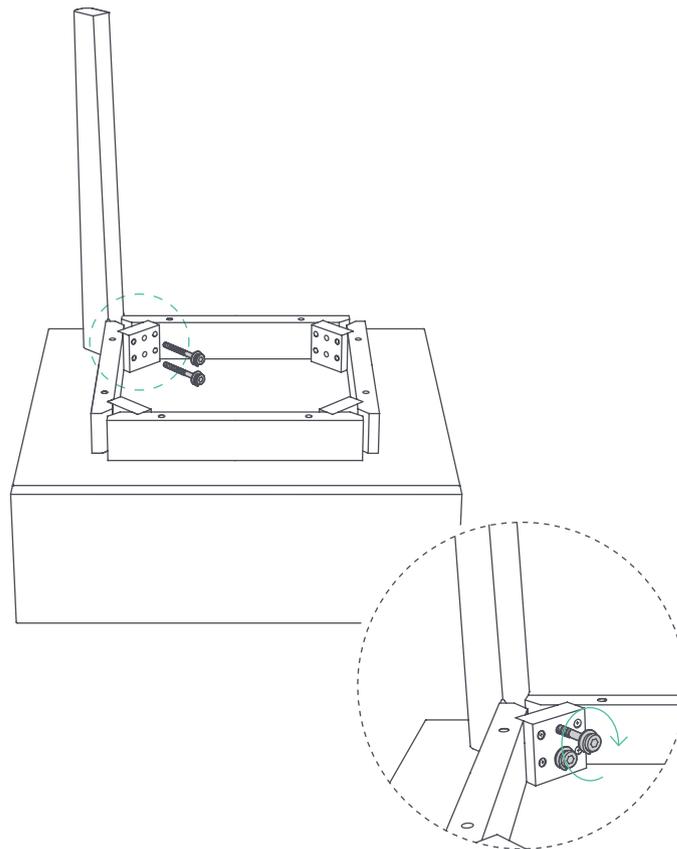

4


Using the assembly tool **C**, tighten the two bolts on each leg.

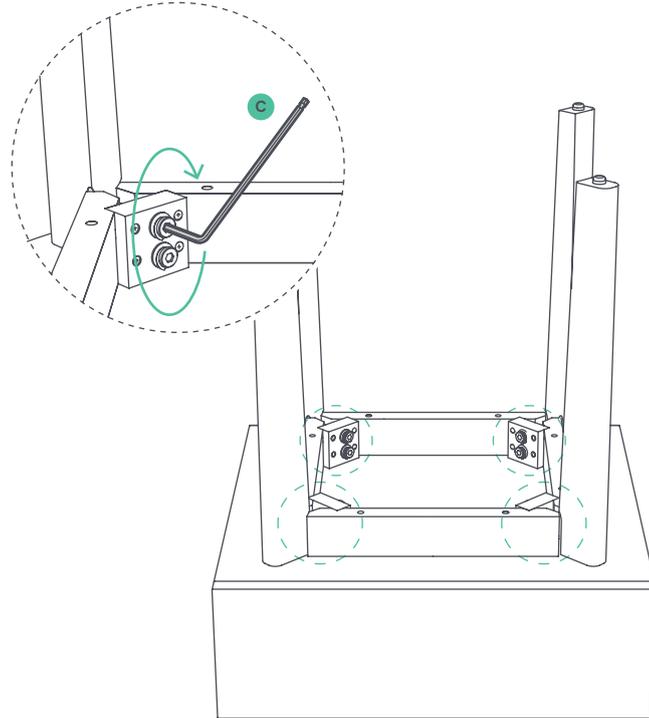

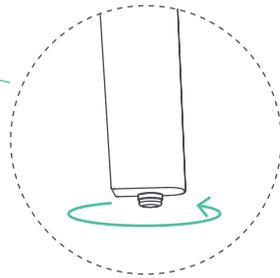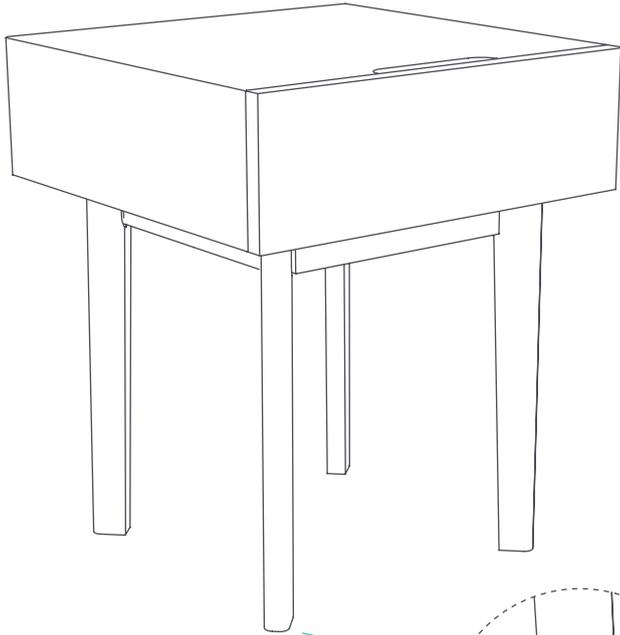

5

Flip your Nook Nightstand over slowly, as the drawer may open while turning it over to the upright position. Twist leveling feet individually to adjust the height and eliminate any tipping.

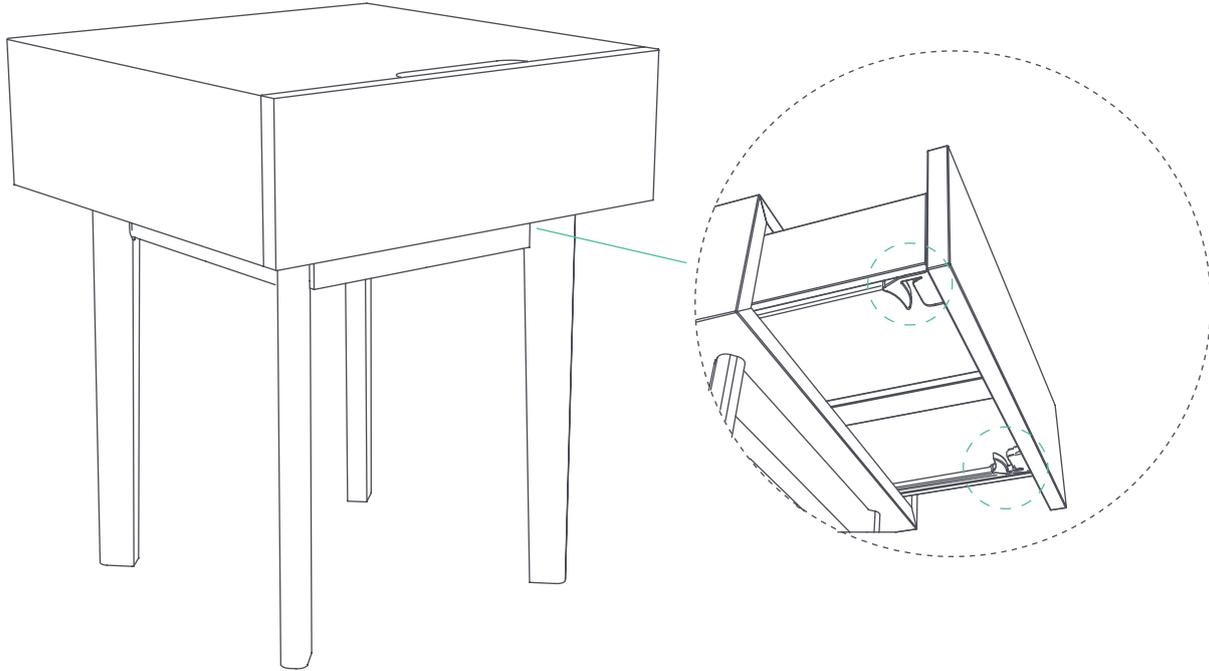


To remove the drawer, squeeze both handgrips beneath the drawer and pull out gently.

Tip Kit Hardware



G Steel anchor × 2

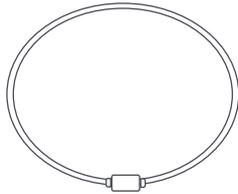

H Braided cable



I Drywall anchor × 2



J Drywall screw (long) × 2




K Drawer screw (short) × 2



This hardware can be used to install directly into drywall with or without an available stud. If you don't see your wall material listed, consult a local hardware provider.

Tools Needed


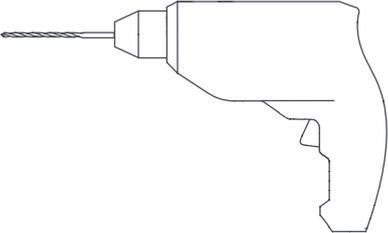


L Drill



M Phillips screwdriver

Tip Kit Assembly

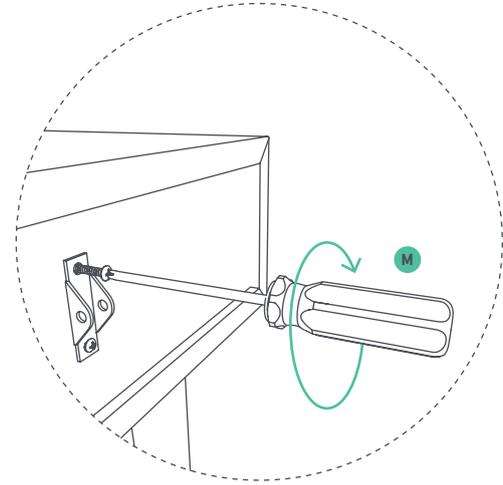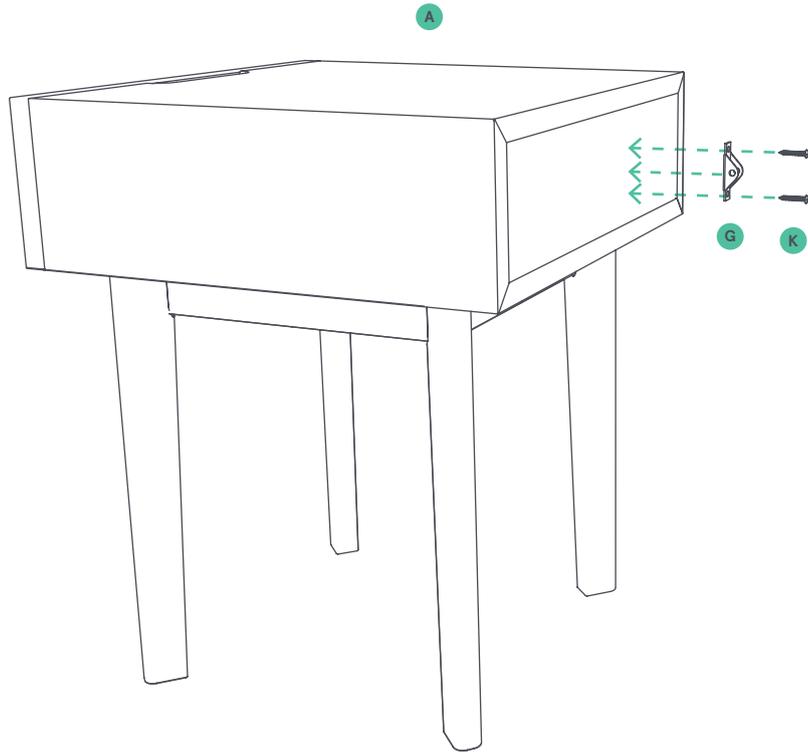



1

Attach a steel anchor **G** to the back of the drawer top **A** using two short drawer screws **K** and a Phillips screwdriver **M**.

2

Place assembled nightstand where you'll be anchoring it along a wall. Leave at least 12" between the wall and the nightstand while you work.

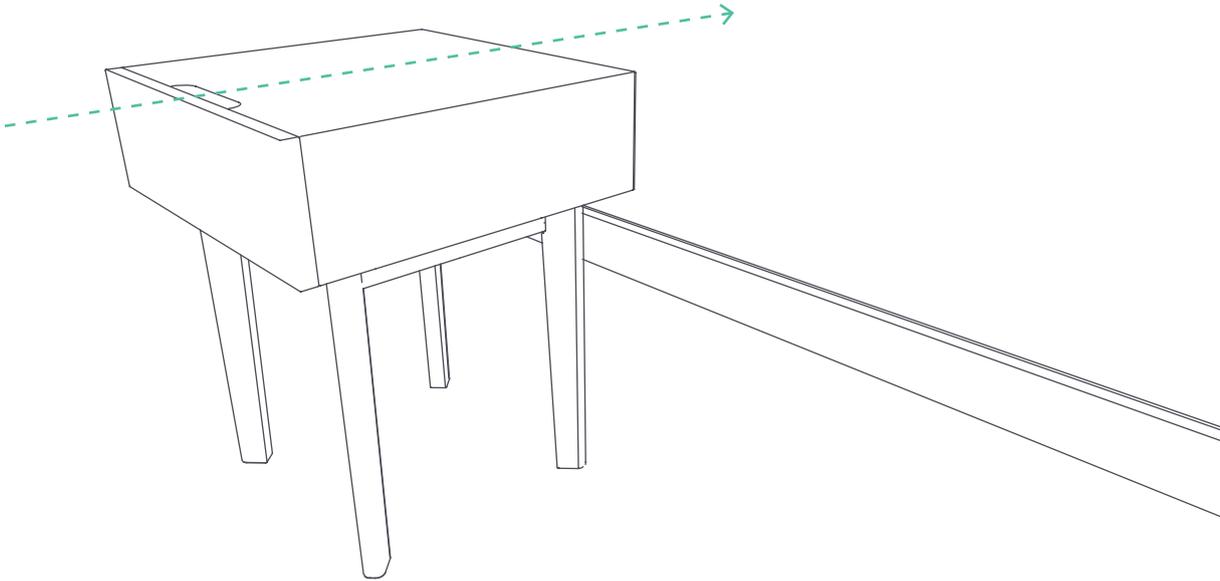

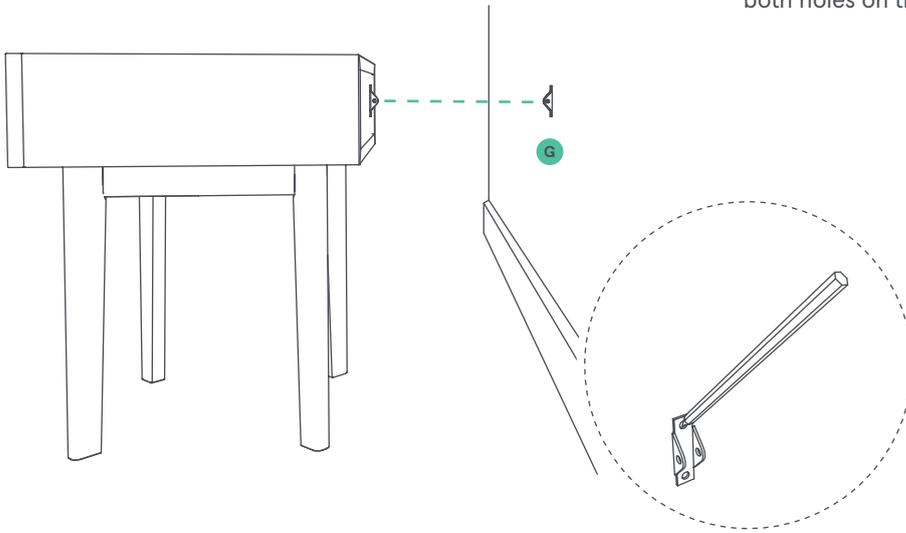


3

With the nightstand in position, place the second steel anchor **G** on the wall at the same height as the steel anchor on the back of the nightstand, and mark both holes on the wall using a pencil.

4a

Anchoring into drywall


Drill a hole in each mark. Insert drywall anchors **I** into holes. Using the long drywall screws **J**, secure the steel anchor **G** to the wall.

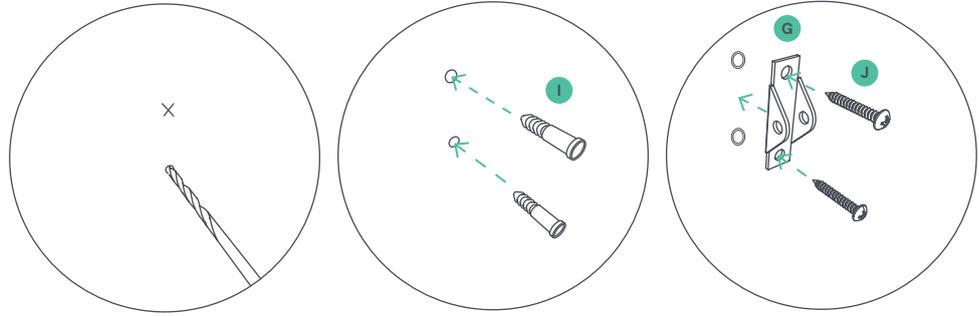


4b

Anchoring into drywall with wood stud

Drill a small hole in each mark. Using the long drywall screws **J**, secure the steel anchor **G** to the wall.

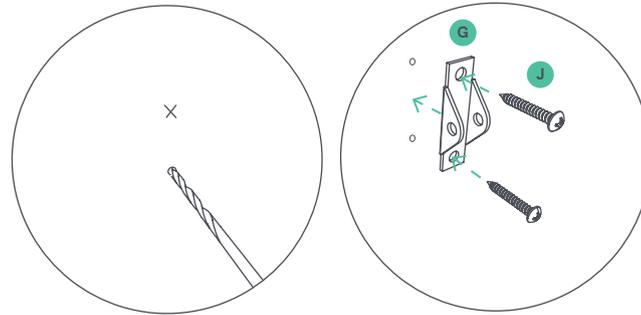

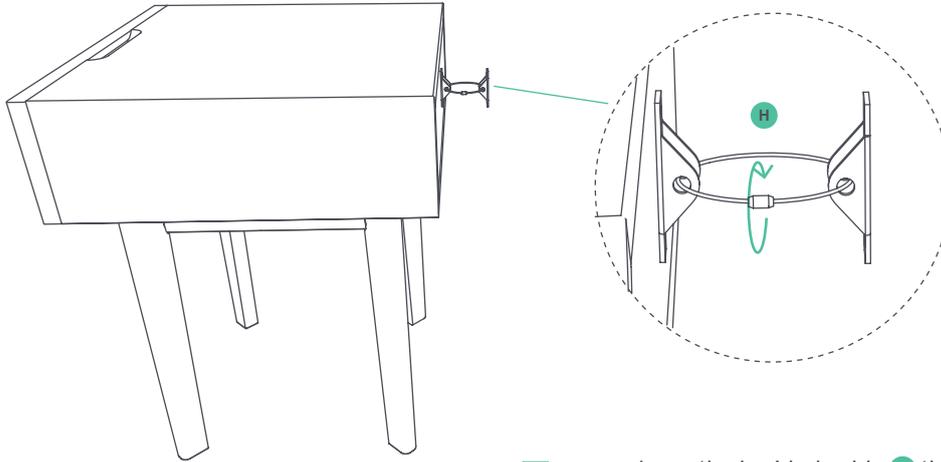

5

Loop the braided cable **H** through the steel anchor holes on the nightstand and the wall. Tighten the screw cap to secure and close the cable loop.

Once your Tip Kit is installed, push your Nook Nightstand against the wall and start using to hold your book, glass of water, and phone.